




SdKfz 251 ausf A Assembly Instructions

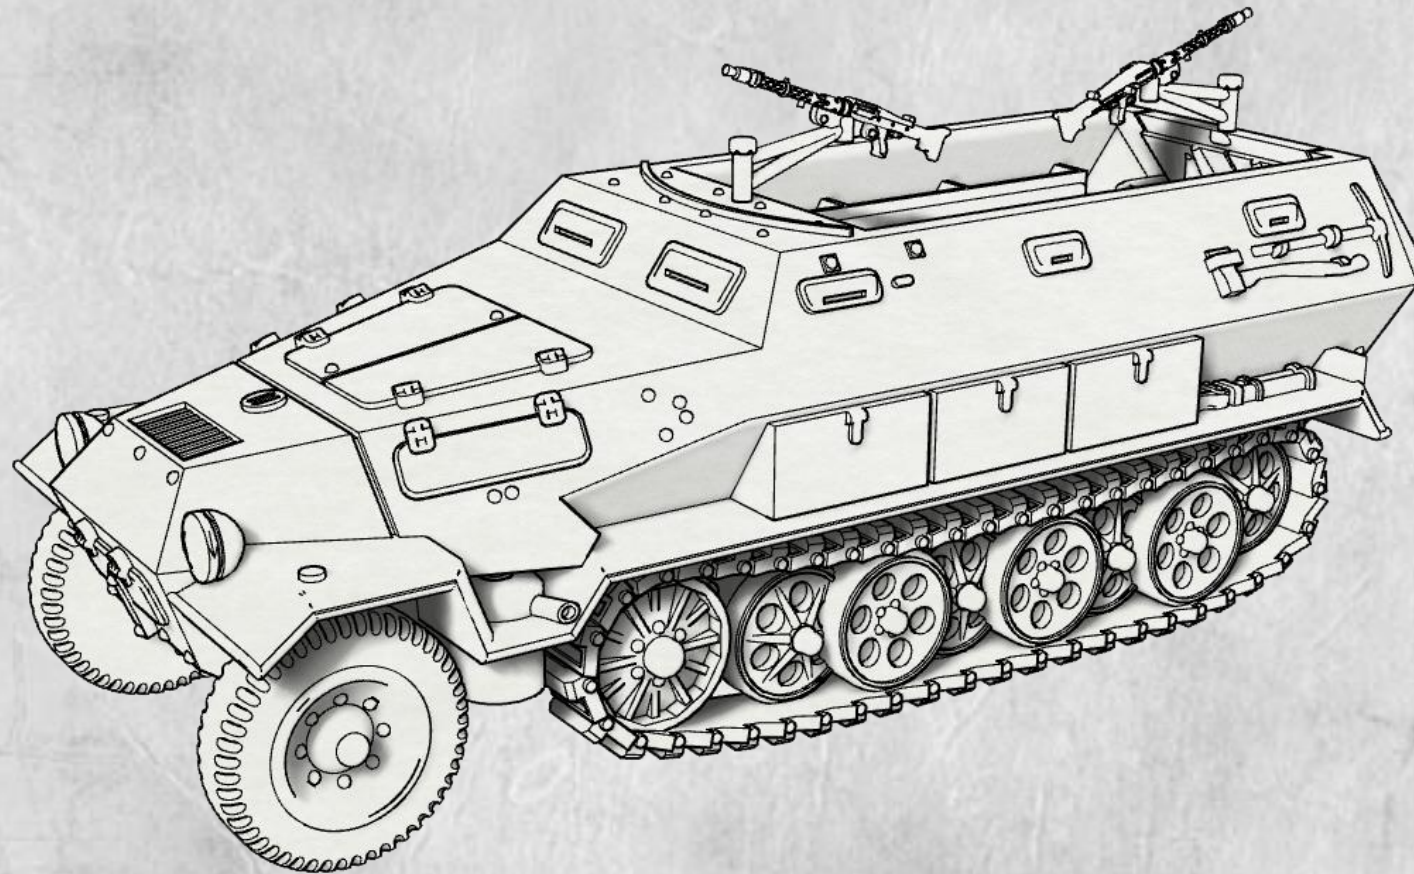

1

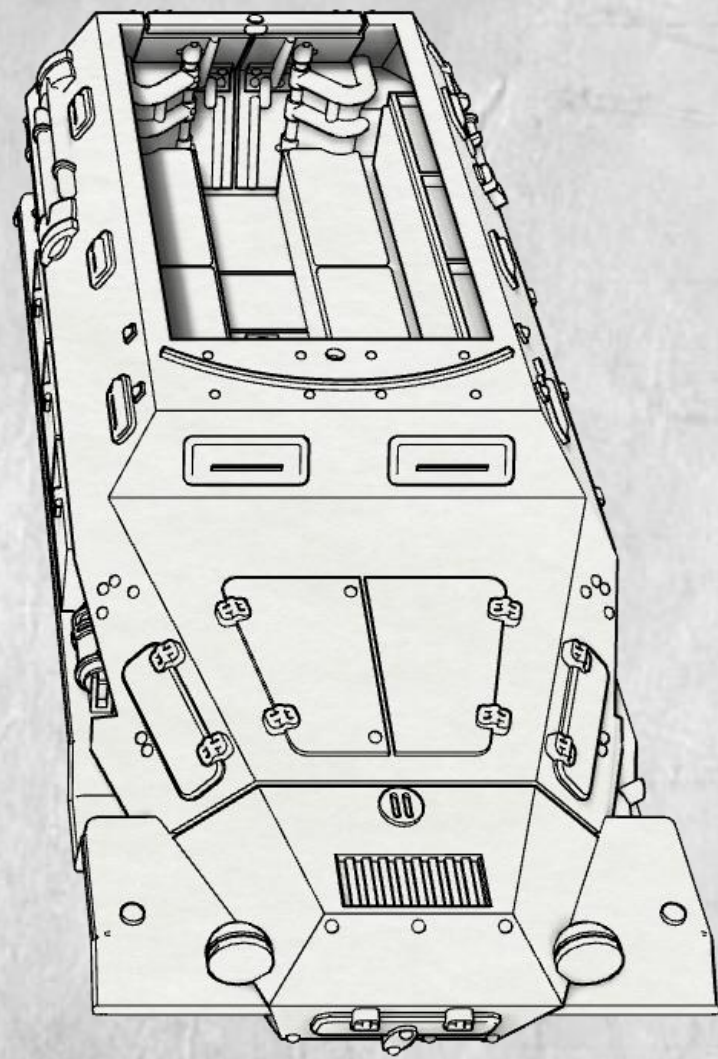


2

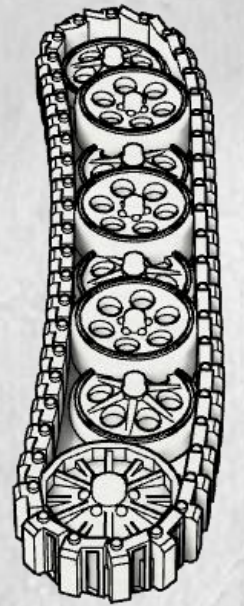


3




4



5 (*2)

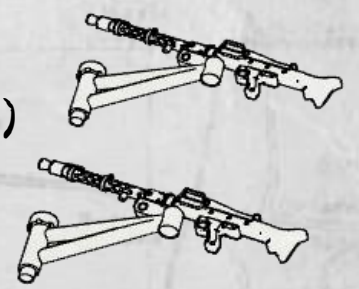


6 (*2)

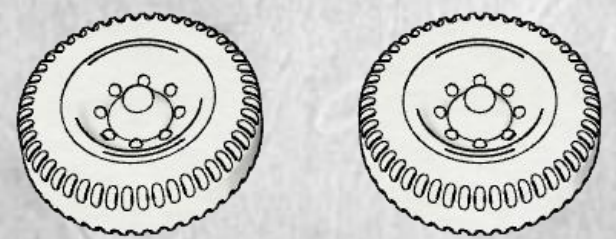


Trench Work

Step One

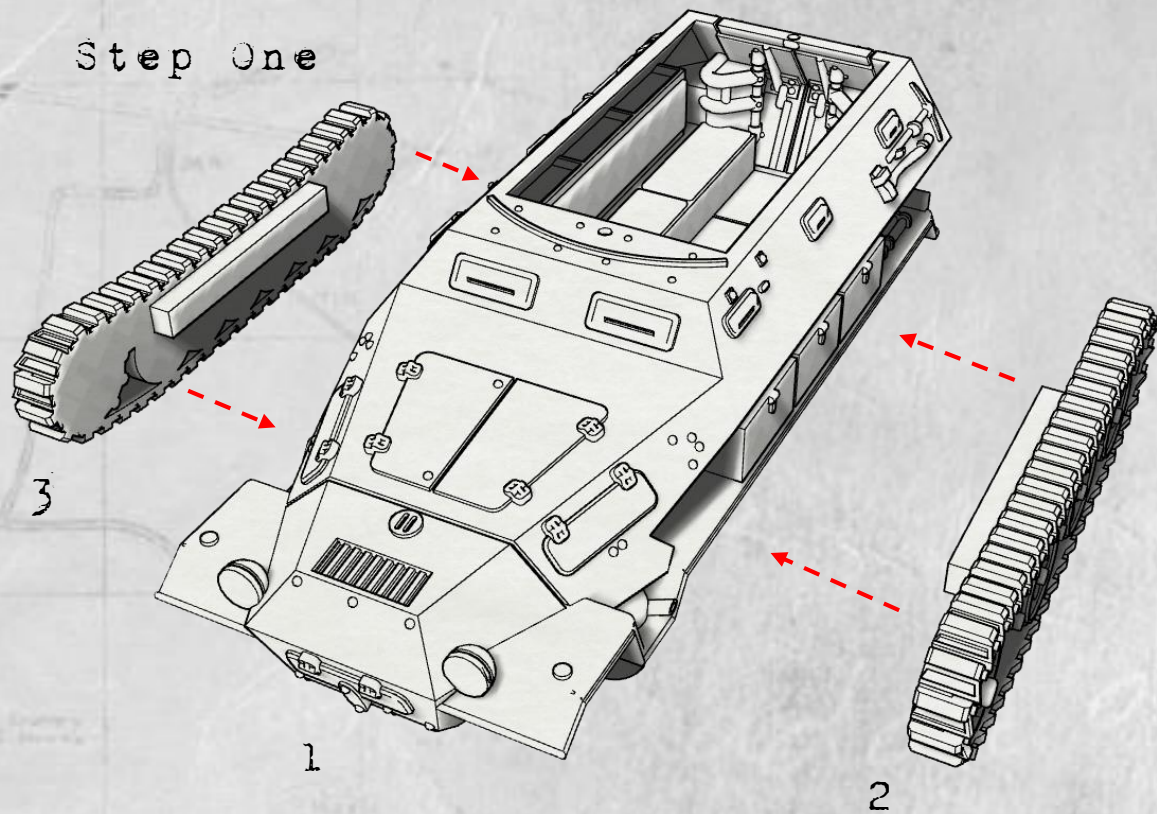


We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

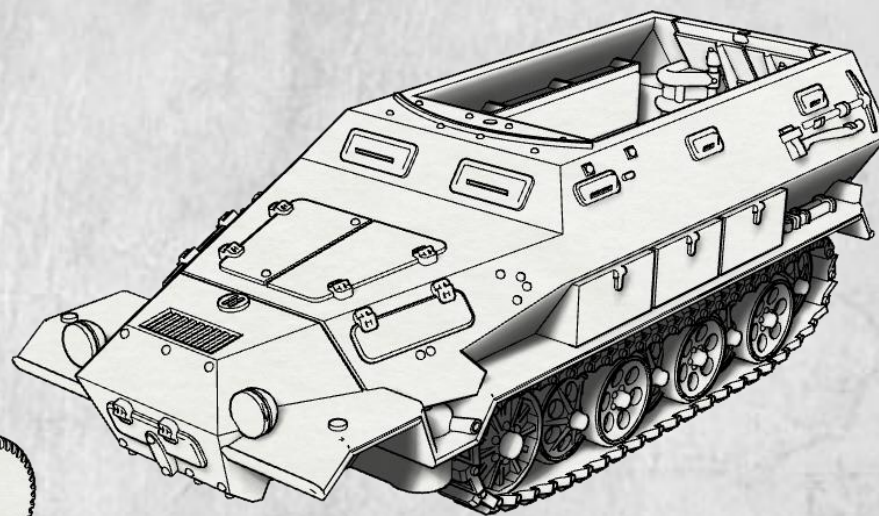

Step Two

Trench Work

Step Three

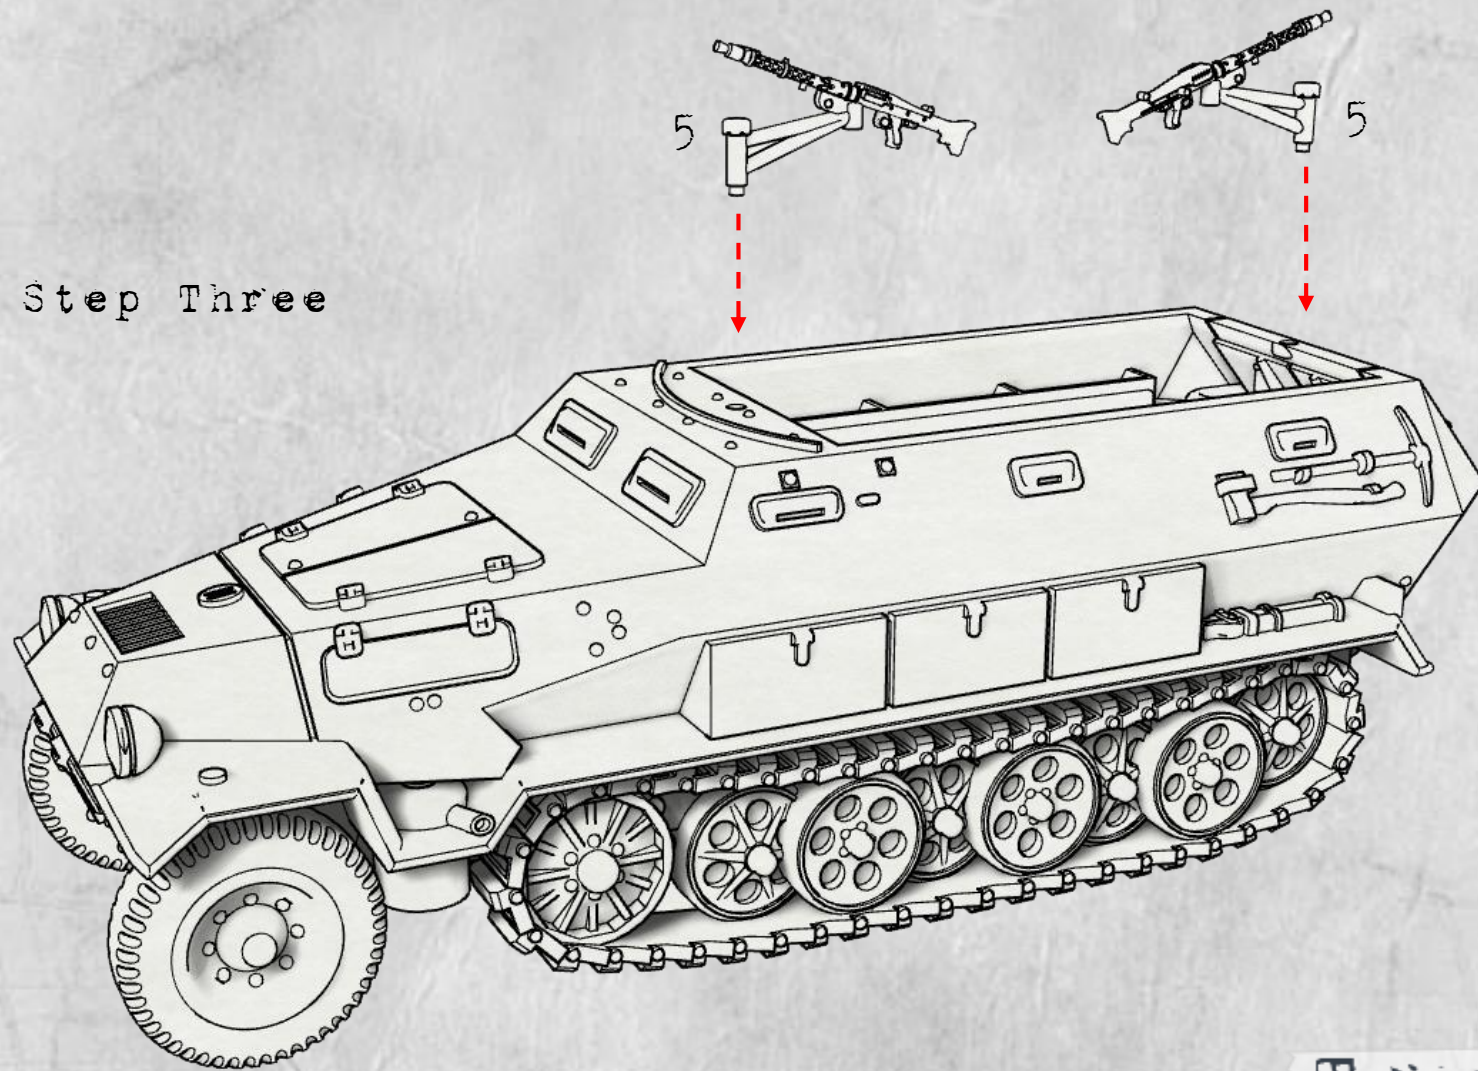

Trench Worx