




SdKfz 251 ausf C Assembly Instructions

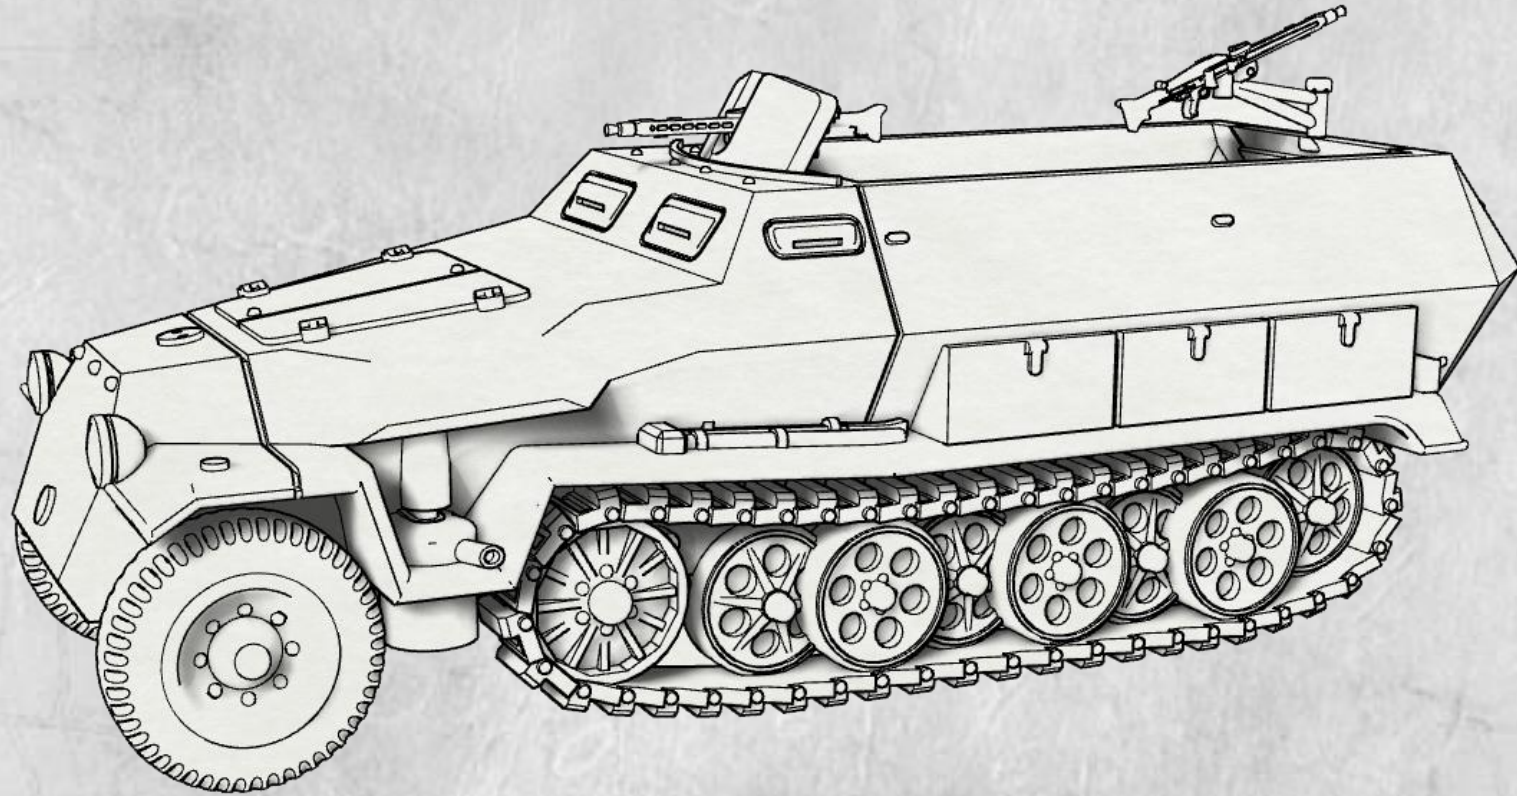

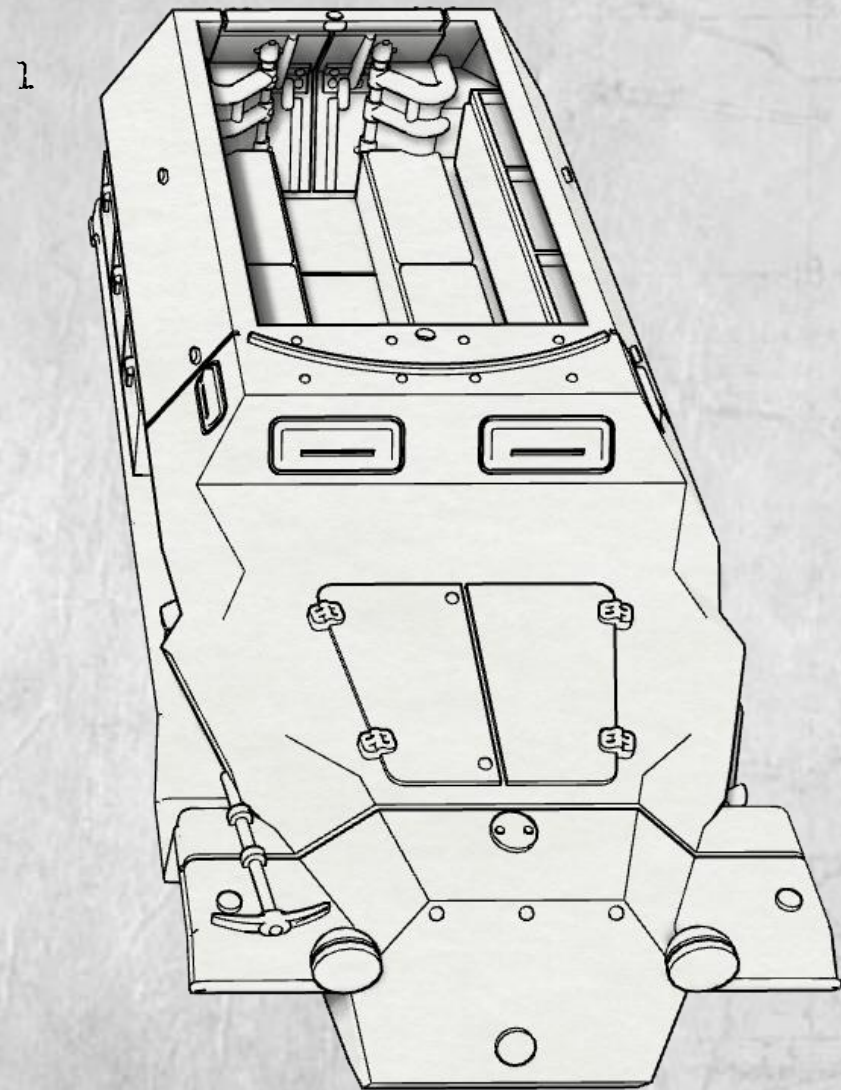


8 (x2) 9 (x2) 10

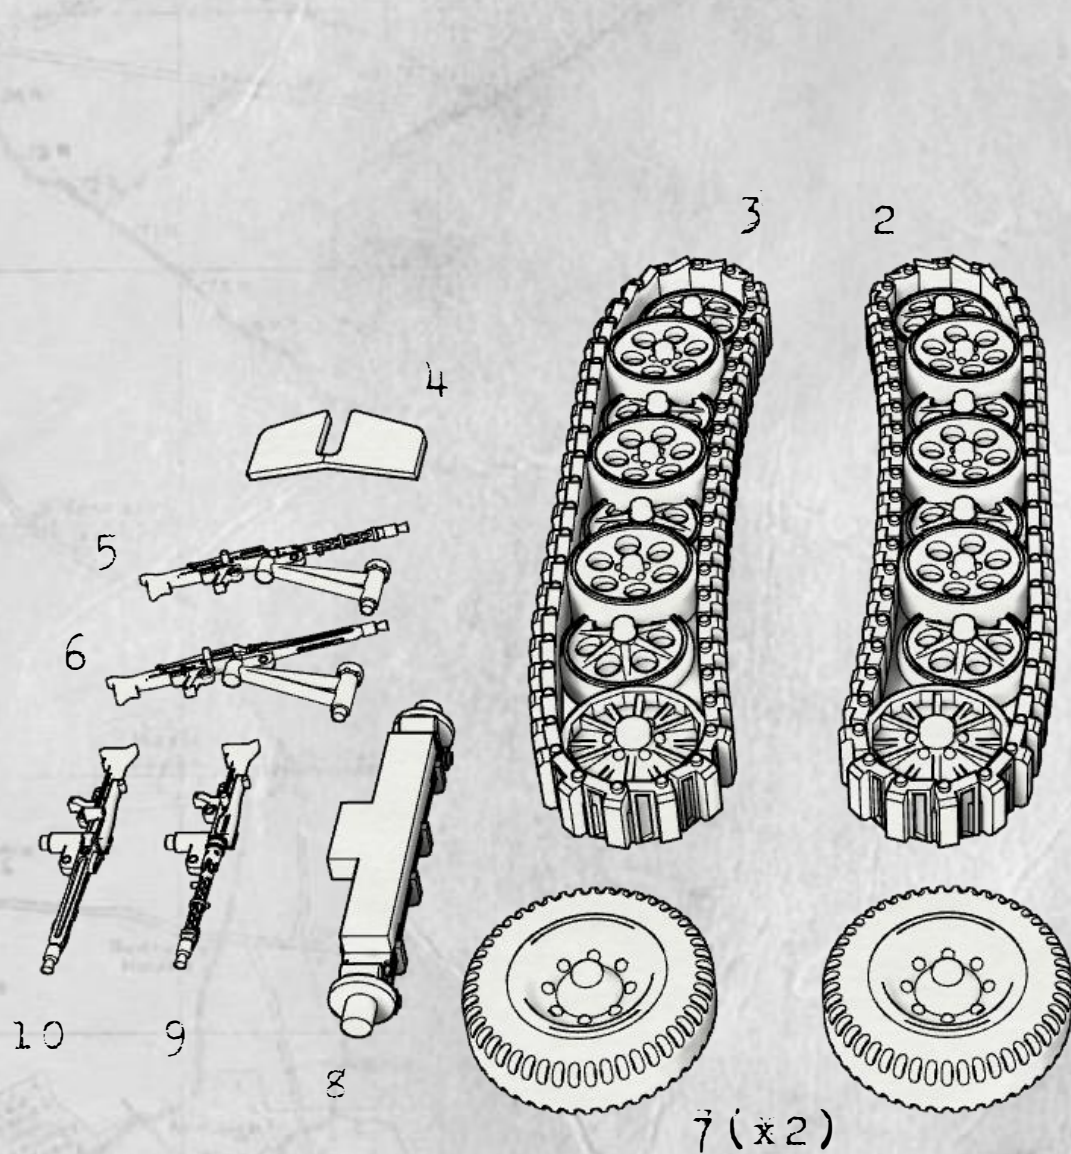

Trench Worx




### Step One

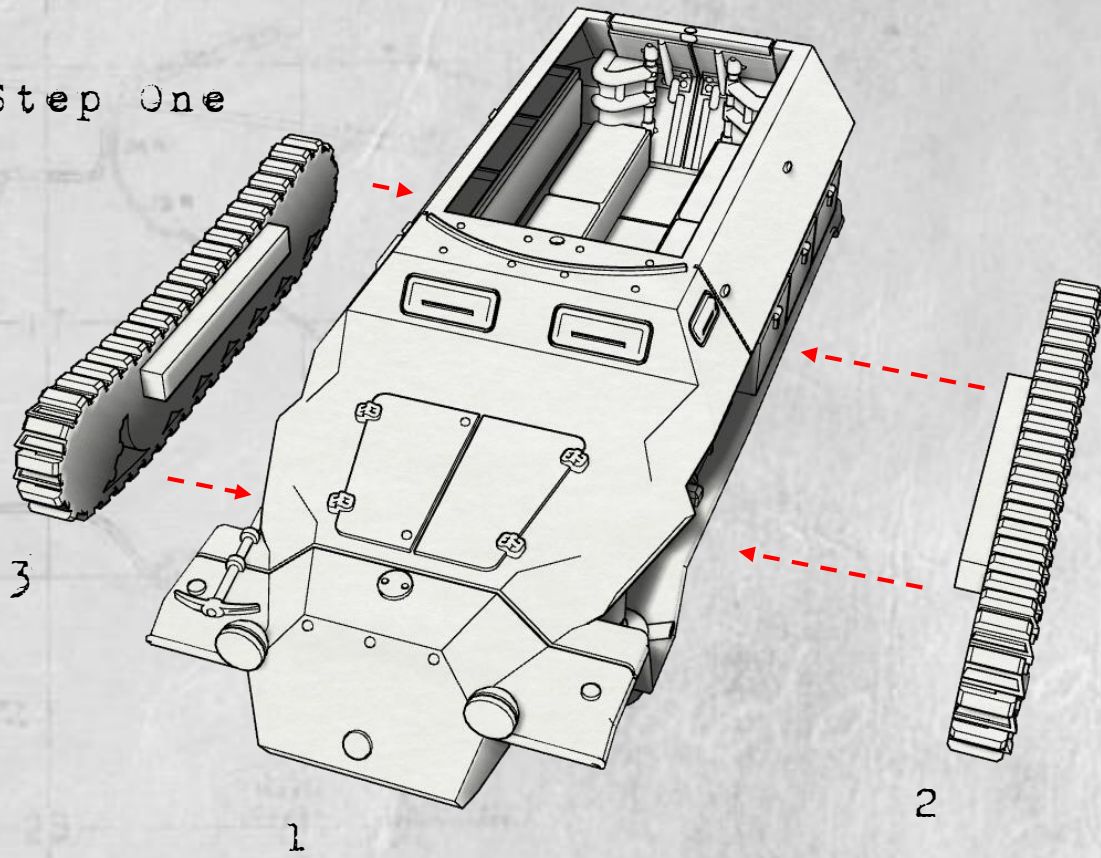

We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.


### Step Two

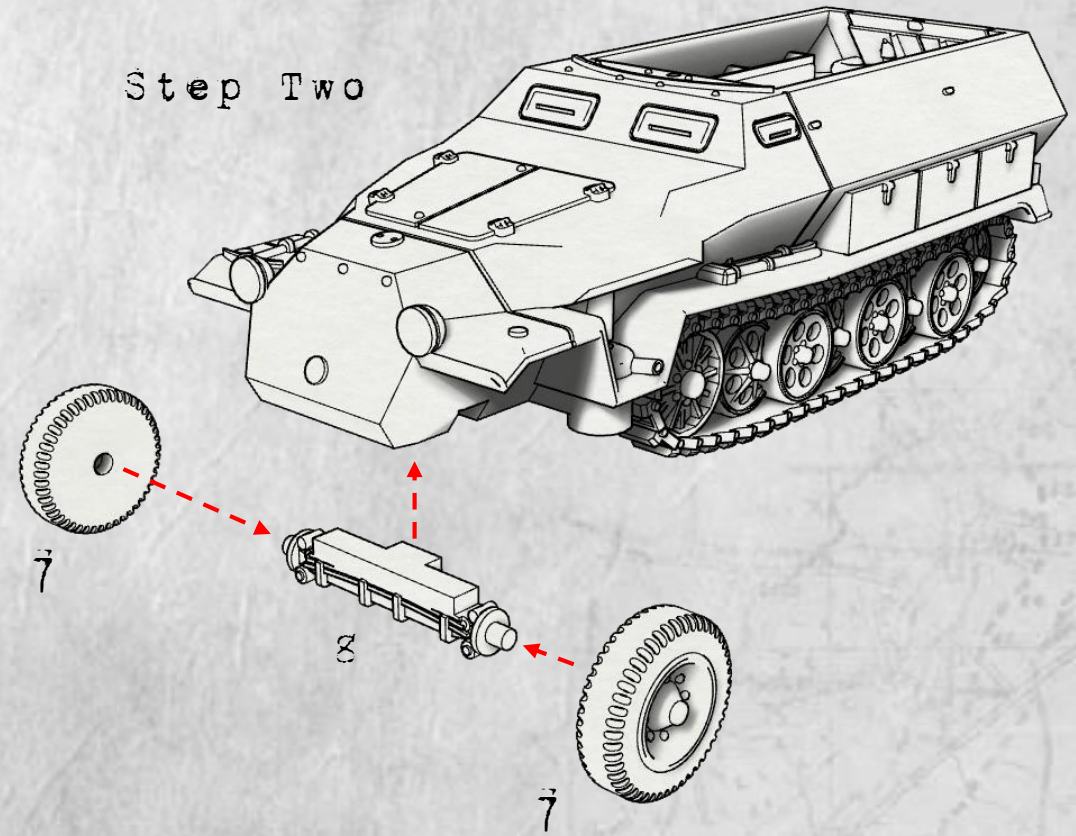


Trench Worx



Step Three

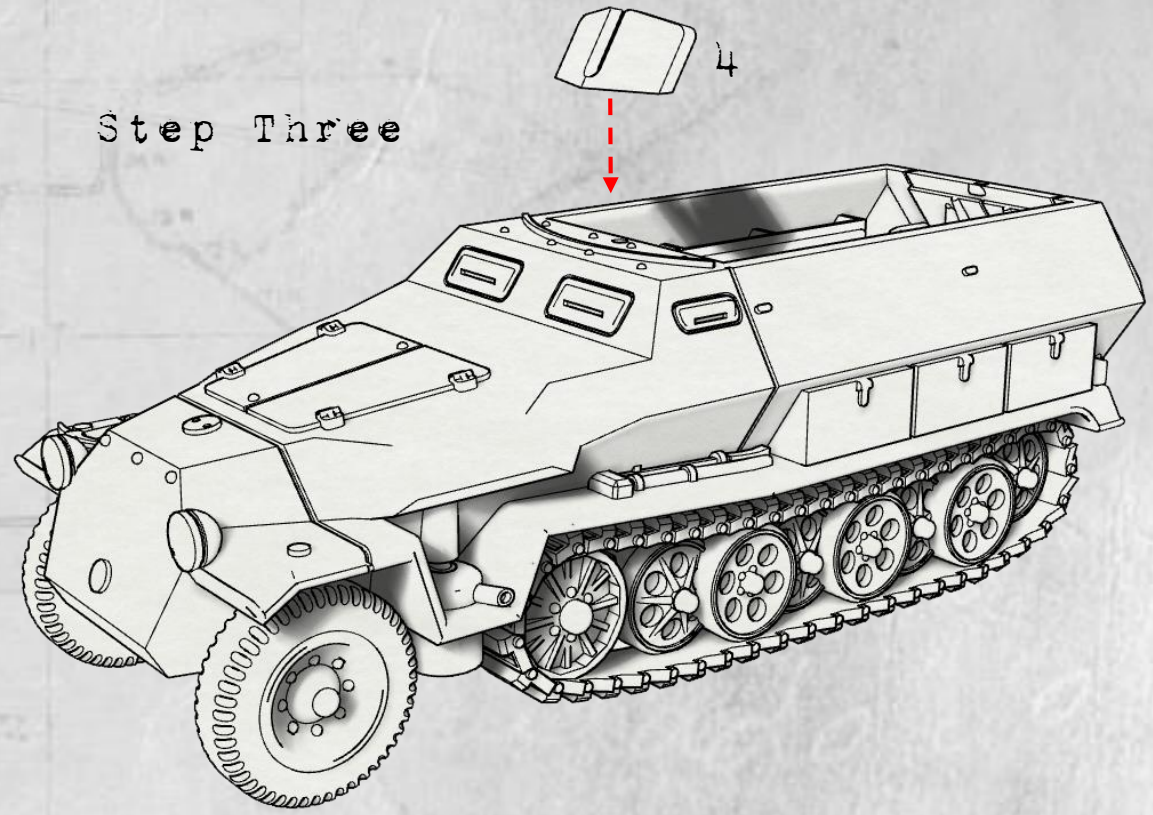

Step Four

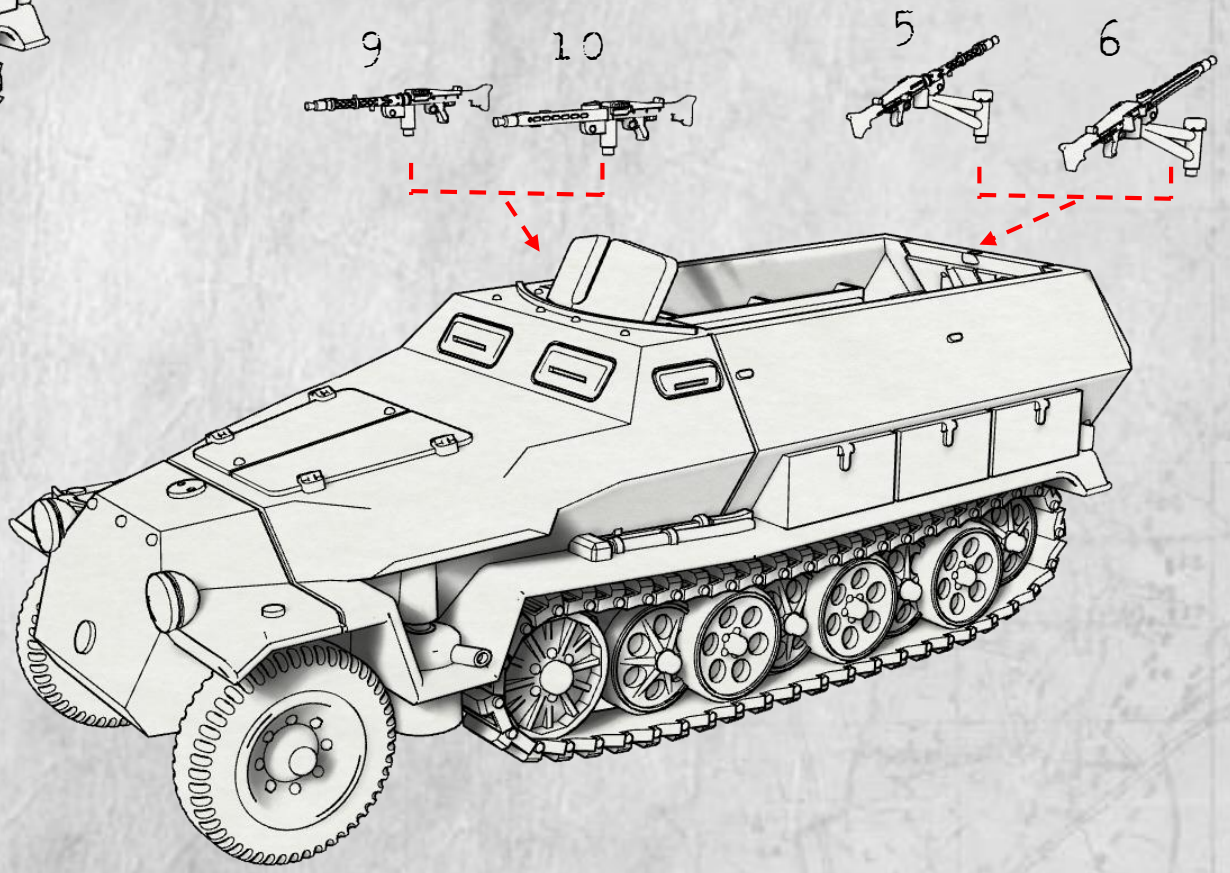

Trench Worx